

Резиновые элементы NRE, NTE, NOF, NAP

Технические характеристики


По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

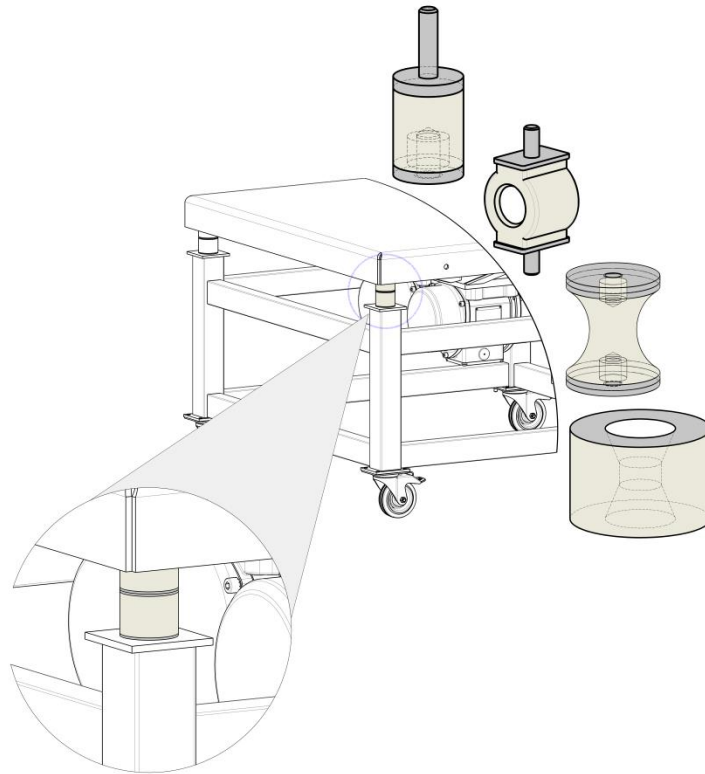

Rubber elements, anti-vibration elements Series NRE, NTE, NOF and NAP

- **Reliable vibration isolation of mechanical components**
- High static and dynamic load capacity
- Elastic support of vibration equipment
- Good insulation and damping properties due to low Shore-hardness



Version A



Version B




Version C



Version D



Version E

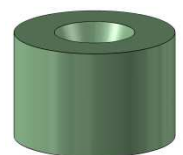

Version F




NetterVibration




Rubber elements, anti-vibration elements Series NRE, NTE, NOF und NAP

Typ	D [mm]	H [mm]	G	Version	L1 [mm]	L2 [mm]	Hard- ness [°sh]	Max. com- pression [mm]	Max. stat. load ca- pacity [kg]
Round elements									
NRE 15/25	15	25	M4	B	4	15	43	3,4	8
NRE 20/30	20	30	M6	B	5	18	45	3,9	16
NRE 25/30	25	30	M6	B	6	18	43	3,9	20
NRE 30/40	30	40	M8	B	9,5	21	45	5,1	31
NRE 40/40	40	40	M8	B	8	23	43	5,4	60
NRE 40/40	40	40	M8	C	8	-	43	5,4	53
NRE 50/40	50	40	M10	B	10	28	43	5,1	86
NRE 50/40	50	40	M10	C	10	-	43	5,1	100
NRE 50/50	50	50	M10	B	10	28	43	6,6	95
NRE 50/50	50	50	M10	C	10	-	43	6,6	80
NRE 70/45	70	45	M10	C	10	-	43	5,9	190
NRE 75/55	75	55	M12	C	12	-	43	7,4	225
NRE 100/55	100	55	M16	C	16	-	43	7,1	465
NRE 150/55	150	55	M16	C	16	-	43	6,8	1.480
NRE 200/100	200	100	M20	C	17,5	-	55	13	2.360
Waist elements									
NTE 40/50	40	48	M8	C	8	-	57	6,6	33
O-shaped elements									
NOF 22/30	22	30	M5	A	-	10,0	60	Z-direction: 3 X-direct.: 12	5 4
NOF 28/38	28	38	M6	A	-	9,5	60	Z-direction: 3 X-direct.: 14	10 16
Bump stops									
NAP 30/15	30	15	M8	D	-	20	45	1,4	25
NAP 30/30	30	30	M8	D	-	20	45	4,5	40
NAP 40/20	40	20	M8	E	-	-	55	3,0	70


Type	D [mm]	H [mm]	G [mm]	Version	Min. com- pression [mm]	Min. stat. load ca- pacity [kg]	Max. com- pression [mm]	Max. stat. load ca- pacity [kg]
Anti-vibration elements								
NRE 100/100s	100	100	32	F	5	135	40	1.090
NRE 150/100be	150	100	45	F	5	660	25	3.310
NRE 150/100g	150	100	45	F	5	335	15	1.010
NRE 150/100hg	150	100	45	F	5	390	25	1.960
NRE 150/100s	150	100	45	F	5	800	25	4.000
NRE 200/170be	200	170	72	F	5	400	25	2.010
NRE 200/170hbl	200	170	72	F	5	240	25	1.200
NRE 250/250be	250	250	51	F	5	370	50	3.720
NRE 250/250hbl	250	250	51	F	5	285	50	2.830

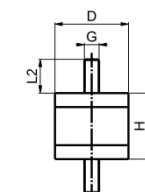


Version A

 


Version B

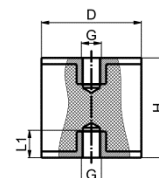


Version C

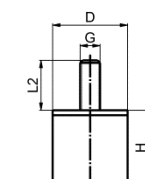

Version D

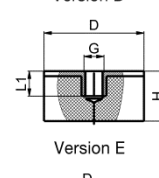



Version E

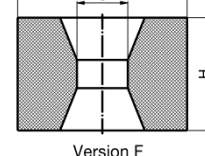

Version F

O-shaped elements (version A)

Waist elements (version C)

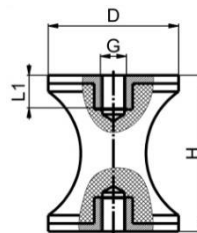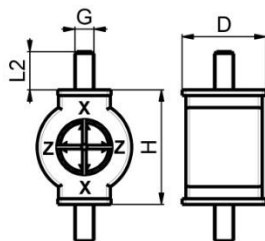

Applications:

Rubber buffers are used for the vibration isolation of mechanical components and the support of vibration equipment.

Compression, shear, torsional stresses or a combination of these can be exerted on rubber elements. The elements isolate and damp very well due to their low Shore-hardness when used properly.

NetterVibration offers the accessories required for the mounting, installation, control and monitoring of vibrators and pneumatic impactors.

Netter provides solutions.

Consult our experienced application technicians.

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	