

Системы мониторинга вибрации VibroMonitor

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93



38


Netter Vibration Monitoring System Series *VibroMonitor*



- Monitoring of the operation of vibrators and impactors
- Constant checking of vibration systems
- Control unit mounted on M36-DIN rail



NVM C1W

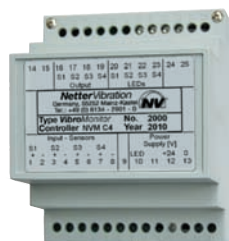

NVM C4



NVM S10




NetterVibration



Netter Vibration Monitoring System Series *VibroMonitor*


<i>VibroMonitor</i>	NVM C1W Control unit	NVM C4W Control unit	NVM C4 Control unit	NVM S10 Sensor
Sensor inputs	1 ■ unpolarised	4 ■ unpolarised	4 ■ unpolarised	
Relay outputs	1 × potential free change-over	4 × potential free change-over	–	
Digital outputs	1 ■ sensor status, NPN, max. 1 A		4 ■ sensor status, NPN, max. 8 mA	
Setting	–	2 ■ SET inputs	–	
Status-LEDs	1 ■ operating voltage control		1 operating voltage control,	
	1 ■ sensor status	8 ■ sensor status	4 ■ sensor status	
Fault	1 ■ Fault output (cable break or short circuit)		4 ■ visual indicators	
Dimensions H × W × D	70 × 35 × 90 mm	70 × 70 × 90 mm	70 × 70 × 90 mm	
Mounting	M36-DIN-standard rail (EN50022)			
	Cylindrical sensor made of stainless steel with 4-pin socket for round connectors M12 x 1 with cap nut and interlock Shock acceleration max. 100 g (peak) Switching threshold adjustable 0-7,0 g (RMS), 0-10 g (peak) Standard setting 3,5 g (RMS), 5 g peak Cable length between sensor and control unit: max. 250 m Ø 12 × 40, thread (plug) M12 ■ 1			

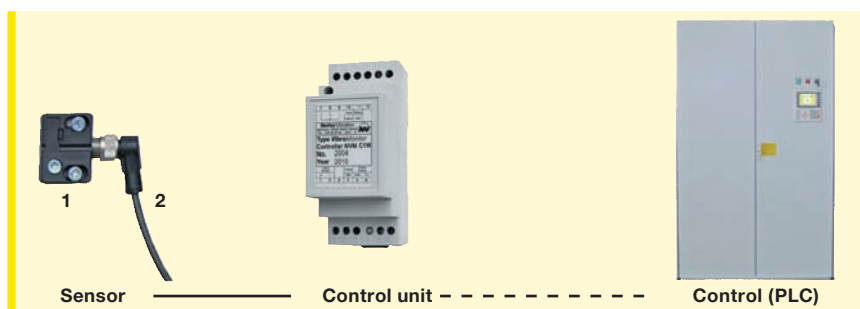

Accessories


- 1 Sensor clamp support in plastic or rubberised stainless steel pipe clamp.
- 2 Elbow connector M12 × 1 or sensor connector cable with cast elbow connector M12 × 1

Vibrator monitoring

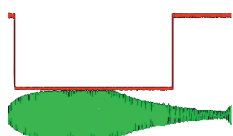

The *VibroMonitor* output (red) shows the acceleration (green) exceeding the set switching threshold*.
*Can be adjusted in the factory.

Impactor monitoring



The *VibroMonitor* output (red) holds its status for at least 450 ms. and therefore reliably records even short impacts (green). This signal length is treatable by standard commercial PLCs.

Applications

The vibration monitoring system series *VibroMonitor* is used for the constant monitoring of impactors, vibrators and vibrating systems.

The *VibroMonitor* system reliably monitors the operation of vibrators and impactors, even in locations with difficult access.

Design and function

The vibration monitoring system consists of sensor, connector cable and control unit. The control unit ensures the safe transmission of the sensor signal up to a maximum cable length of 250 m. Depending on the version up to 4 sensors can be supplied by a control unit.

The system displays two operating status informations per sensor: "Vibration" or "No vibration".

Permissible operating conditions

Operating voltage:

24 V DC (+20 % / -10 %), < 5 % residual ripple

Ambient temperature:

C1W and C4W: 0 °C to 40 °C

C4 and S10: -20 °C to 40 °C

NetterVibration offers the accessories required for the mounting, installation, control and monitoring of vibrators and impactors.

Netter provides solutions.

Consult our experienced application technicians.

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	

Эл. почта ntg@nt-rt.ru || Сайт: <https://netter.nt-rt.ru/>